

my<sup>+</sup>page<sup>+</sup>®

Broadcast  
Messaging System



MADE IN ITALY



# MYPAGE+




## BROADCAST MESSAGING SYSTEM FOR CONTAMINATION CONTROLLED ENVIRONMENTS

AM Instruments introduces MyPage+, the only device on the market capable of simultaneously broadcasting date and time, text messages, images and videos.

**THE SIMPLE AND INTUITIVE INTERFACE OF MYPAGE+ FACILITATES MULTIPLE DEVICE MANAGEMENT.**



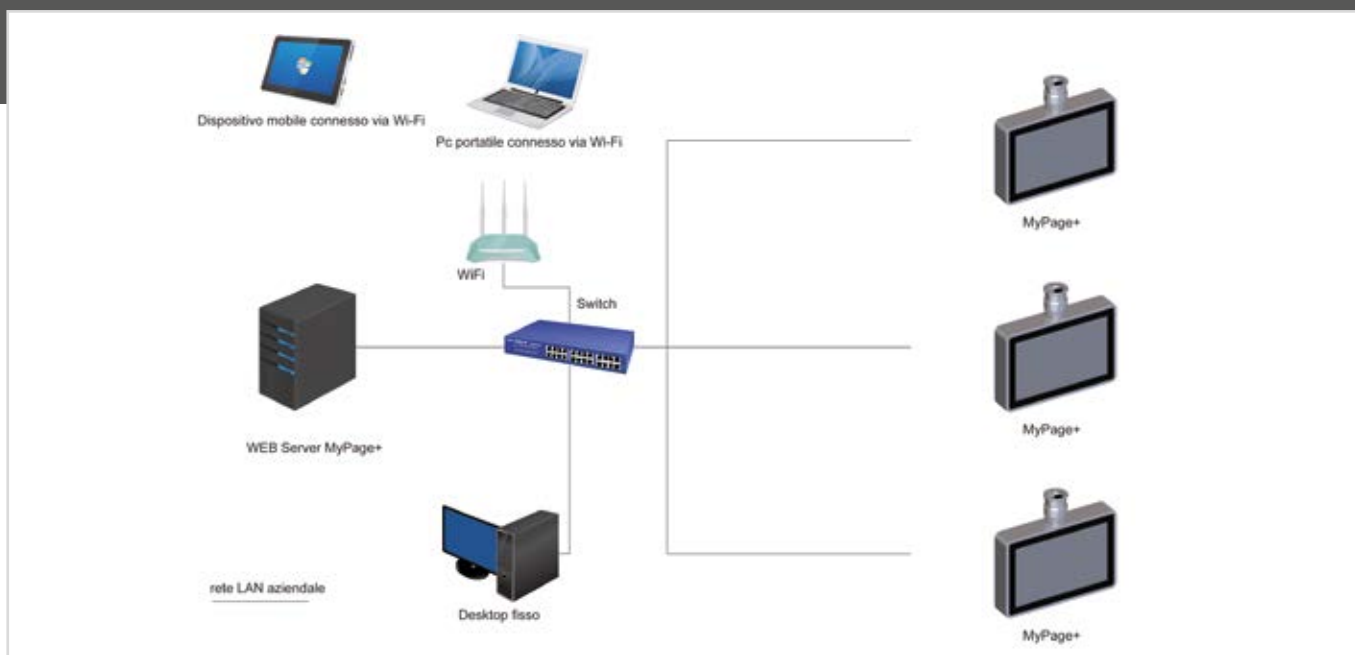

## MULTIPLE MANAGEMENT

Each device is identified via a unique and customisable ID. Possibility to manage independently multiple devices placed in different areas of the plant.

## ORGANIZING MESSAGES

- MyPage+ is run directly via a computer connected to the network with a web interface
- A library of customizable templates is available on the web interface. You can define flexibility of duration and frequency content

## FUNCTIONS

- display of scheduled or instant messages
- display of NTP (Network Time Protocol)
- display of one or more templates containing videos, images, texts
- display of emergency messages with priority over other content
- possibility to add content via web application with any electronic device logged on to the network
- application access via user name and password with different levels of authorisation
- possibility to manage MyPage+ as an individual device or in groups of devices
- possibility of connecting to the customer SCADA system to show values such as differential room pressure, temperature, humidity, particle counting and more

TECHNICAL DATA		
	HANGING*	BUILT-IN
external dimensions (wxhxl)	260 x 180 (+ 63 mm/tri-clamp) x 46 mm	247 x 167 x 38 mm
supply voltage	12V dc	
network connection	RJ45	
mechanical connection	tri-clamp 1 1/2"	
display	TFT-LCD 1280x800 - 10.1" 262K colours anti-glare viewing angle 85° offset in every direction	

MyPage+ is available in built-in and hanging models.





COMPANY WITH  
QUALITY SYSTEM  
CERTIFIED BY DNV GL  
= ISO 9001:2015 =